
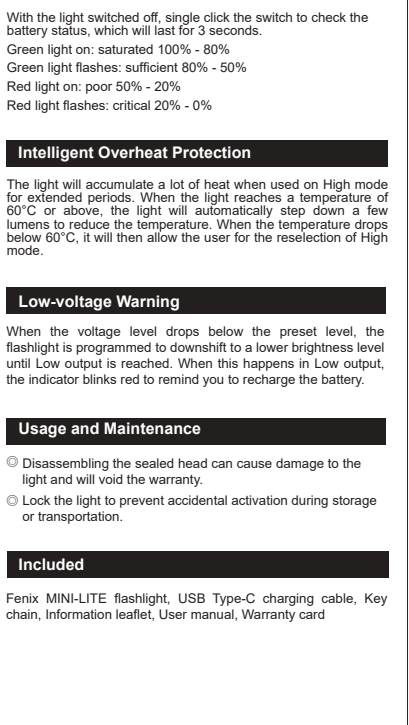


105G铜版纸/单黑双面印刷/490*225mm/风琴折后98*225mm/*

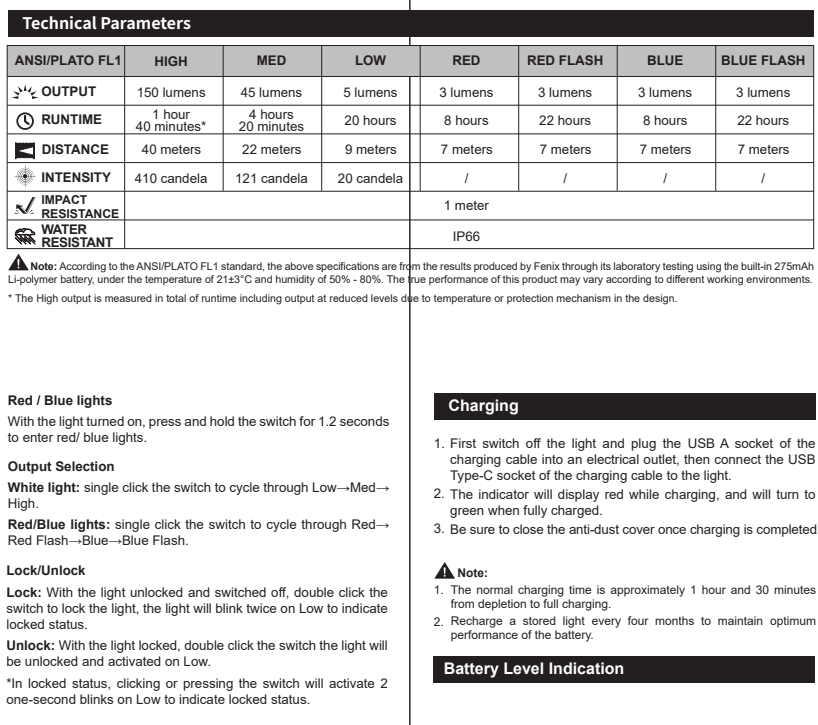

Lock/Unlock

Lock: With the light unlocked and switched off, double click the switch to lock the light, the light will blink twice on Low to indicate locked status.

Unlock: With the light locked, double click the switch the light will be unlocked and activated on Low.

*In locked status, clicking or pressing the switch will activate 2 one-second blinks on Low to indicate locked status.

Note:

1. The normal charging time is approximately 1 hour and 30 minutes from depletion to full charging.
2. Recharge a stored light every four months to maintain optimum performance of the battery.

Battery Level Indication

*锁定状态下, 只响应双击解锁操作, 单击或者长按开关, 手电均会以低亮档闪烁2次然后熄灭, 提示目前处于锁定状态。

Sbloccare

Con la luce bloccata, fare doppio clic sull'interruttore la luce sarà sbloccata e attivata su Basso.

to alla ricarica completa.

2. Ricaricare una luce immagazzinata ogni quattro mesi per mantenere le prestazioni ottimali della batteria.

blinkend Bediensperre Drücken Sie die Bediensperre, um das Menü zu verlassen und das Display zu löschen.	2. Laden Sie umgehend bei roter Anzeige der Kapazität und auch mindestens alle 4 Monate auf, um eine möglichst lange Akkulebensdauer zu erreichen.
--	---

● 由于采用了长按开关开机设计,灯具放在包里时可能会因为挤压而误点亮。如果希望避免此问题,您可以在把灯具装入包中前双击开关锁定。

Incluso Nella Confezione

100
